
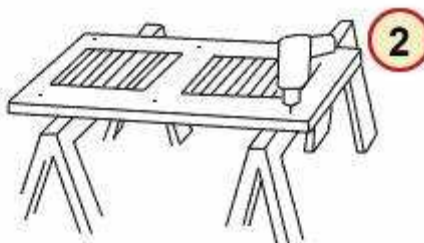


Mounting Instructions

On masonry, brick, cinderblock etc

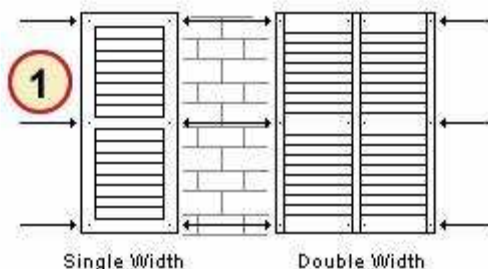

1. Place shutter in desired position. Mark locations for 6 holes approx 1.5" (38mm) from top and bottom and in line at the centre.

2. Lay shutter face up and drill a 3/8th" (9.5mm) hole through the rail at each mark

Re-position shutter in the desired position and using a punch or other suitable marker, mark the mounting hole location on the building

3. Remove shutter and at the marks drill a 9/32"(7mm) diameter hole into the wall at least 1 3/4"(45mm) deep

Place shutter back in the desired position. Put shutter spike in hole. Using a hammer gently tap the spike in part way. Repeat until all 6 spikes are started then finish tapping them all in.

4. BE CAREFUL NOT TO TAP THEM IN TOO FAR.They should only go in far enough for the underside of the shutter spike head to touch the shutter when the back edge of the shutter is touching the building.

Shutters can be easily cleaned with mild dish soap and water to maintain their lustre.